

Installing Guide For E7048 Toyota Highlander

1: Use plastic knife to loosen the decorated bar




2: Same as step 1



3: Take out the air conditioner with your hand



4: Remove the power connector

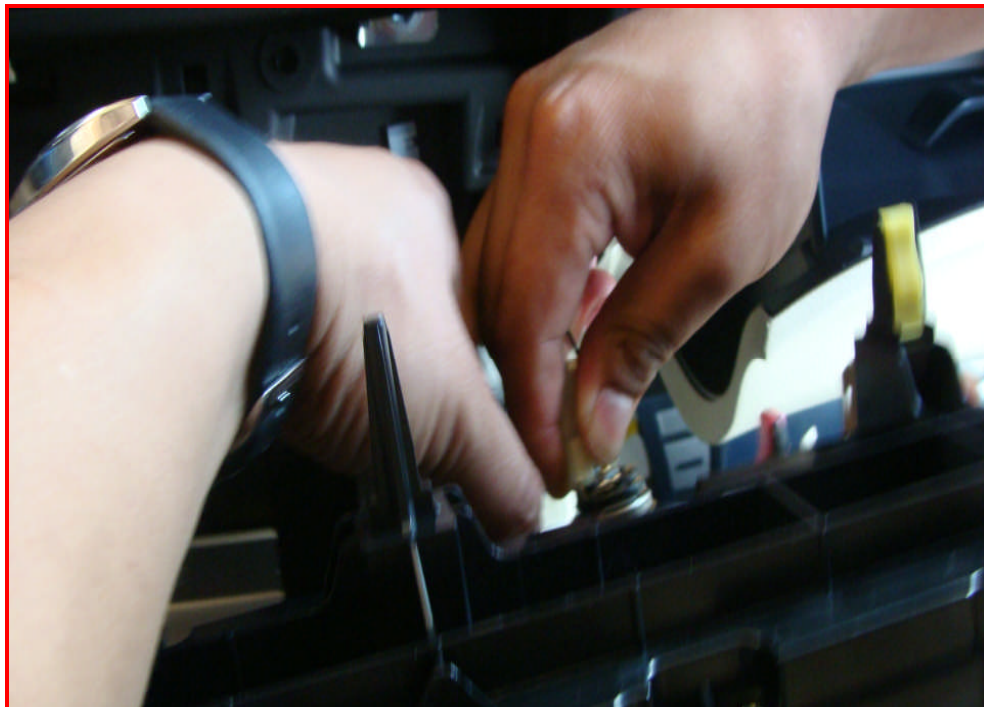

5: Use plastic knife to loosen the air conditioner outlet



6: Take out the wind outlet



7: Remove the screws of original main unit



8: Same as step 7



9: Same as step 8



10: Same as step 9




11: Lift up the original main unit with your hand




12: Remove the connector of factory screen




13: Remove the connectors of original main unit

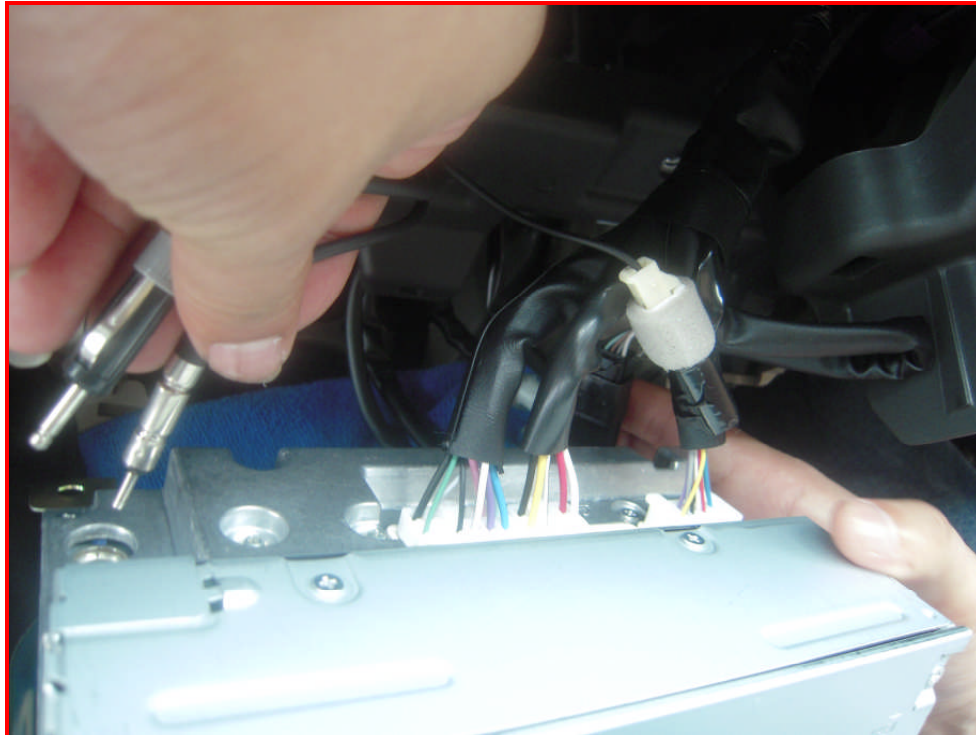

14: Remove the bracket screws of original main unit

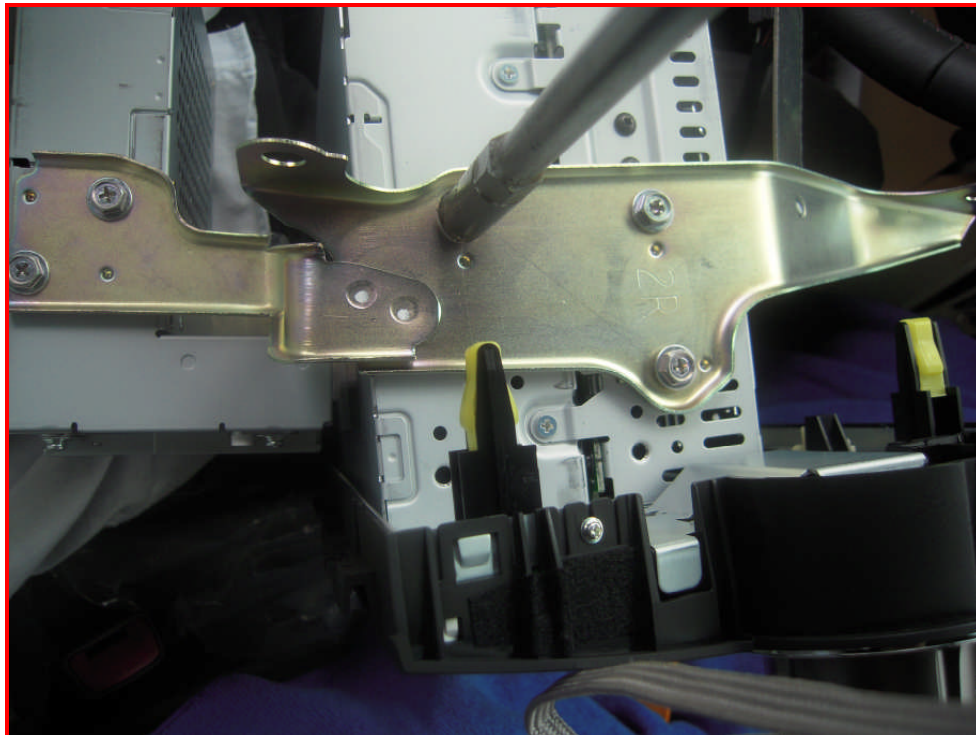


15: Same as step 14

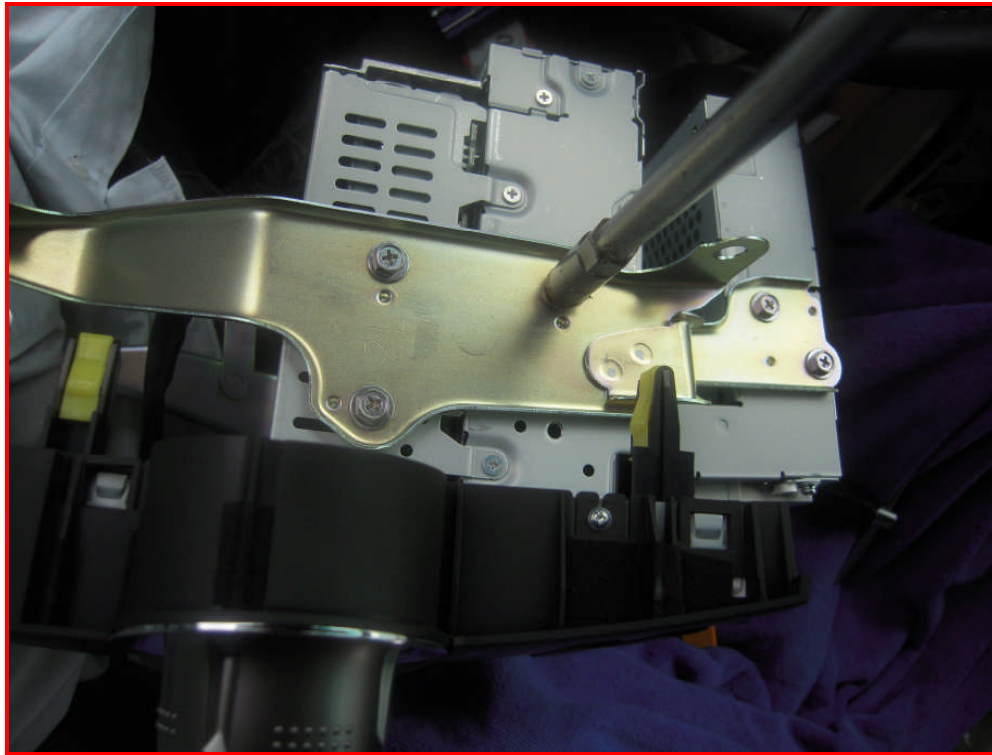

16: Use plastic knife to loosen the button of hazard lamp




17: Same as step 16

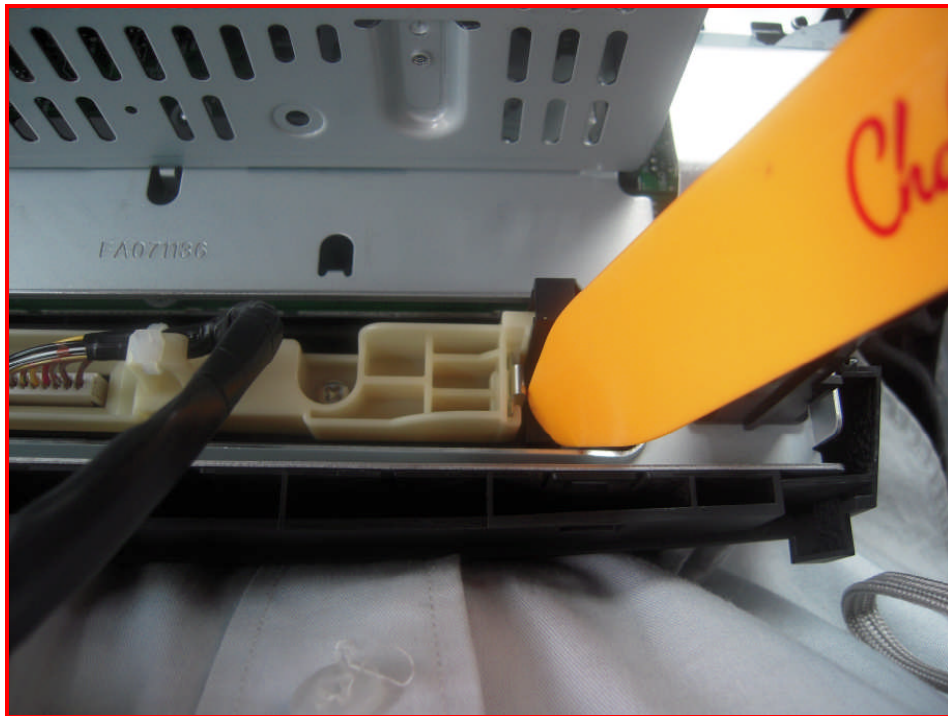


18: Take out the button of hazard lamp



19: Install the original bracket on FLYAUDIO's main unit

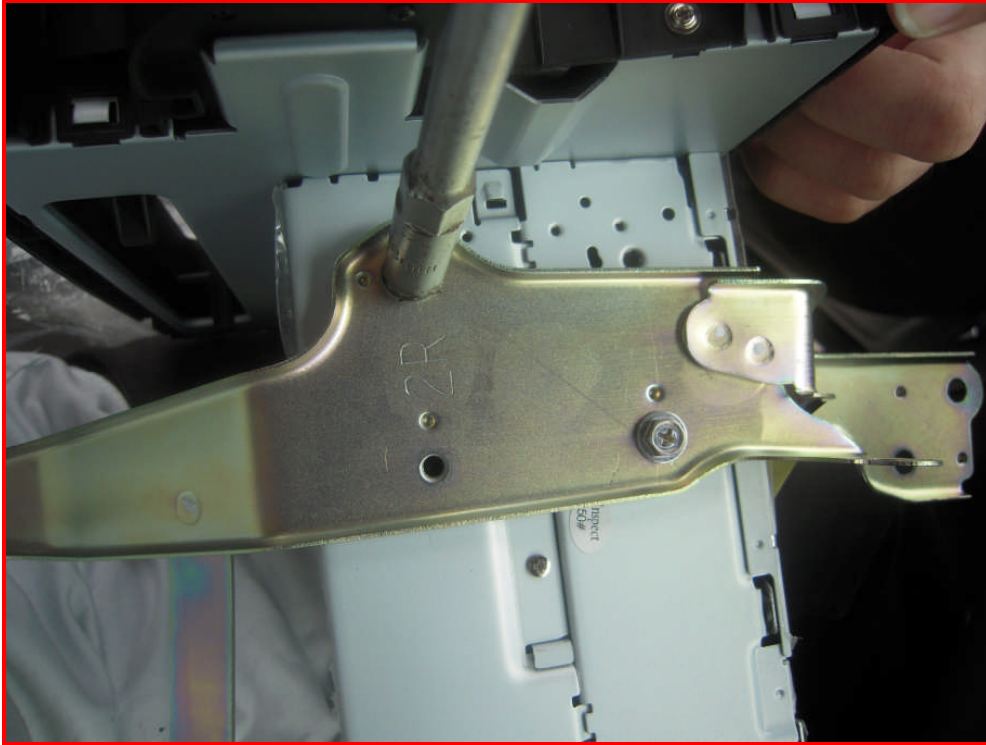

20: Same as step 19

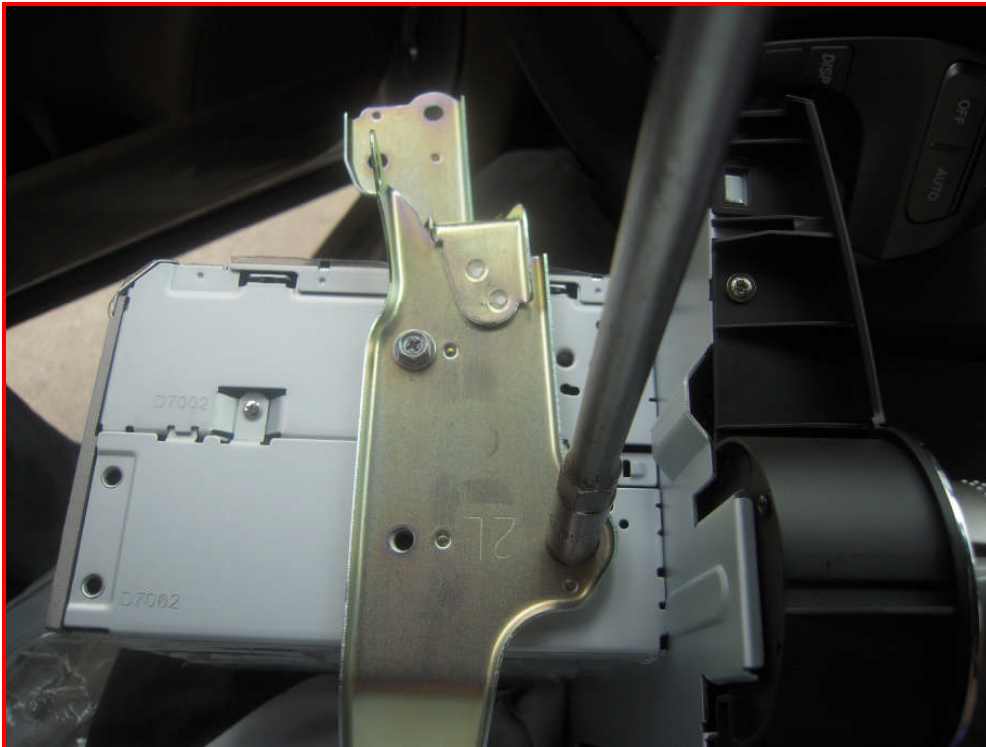


21: Install the factory screen



22: Same step as 21



23: Fixed the factory screen

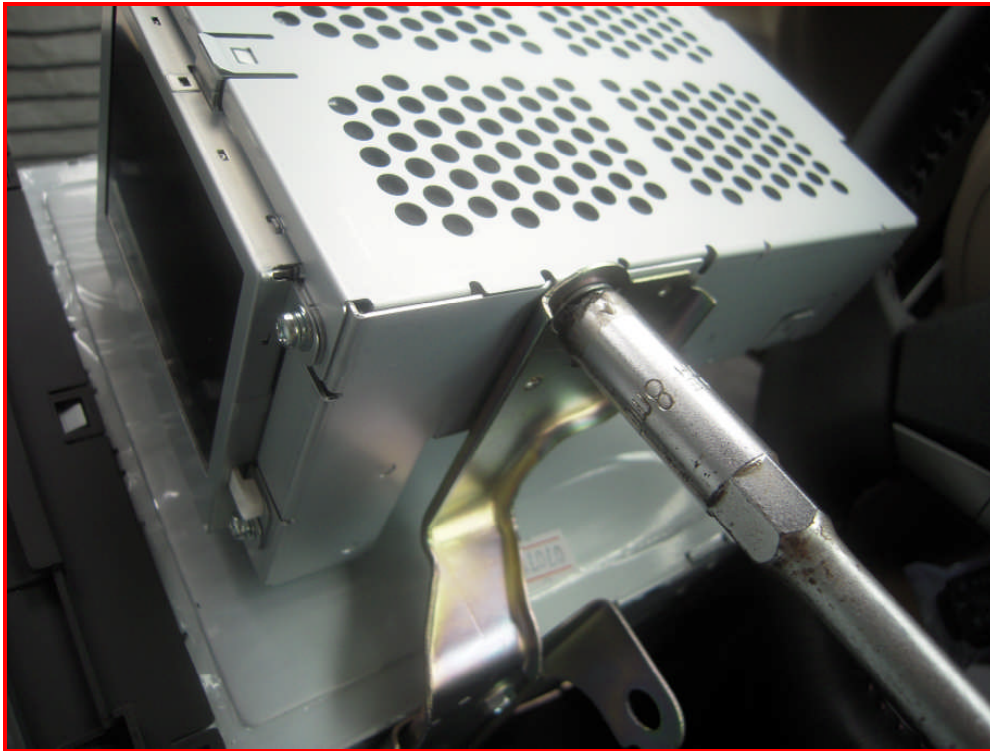


24: Install the button of hazard lamp



25: Same step as 24




26: Connect the original cables to FLYAUDIO's cables

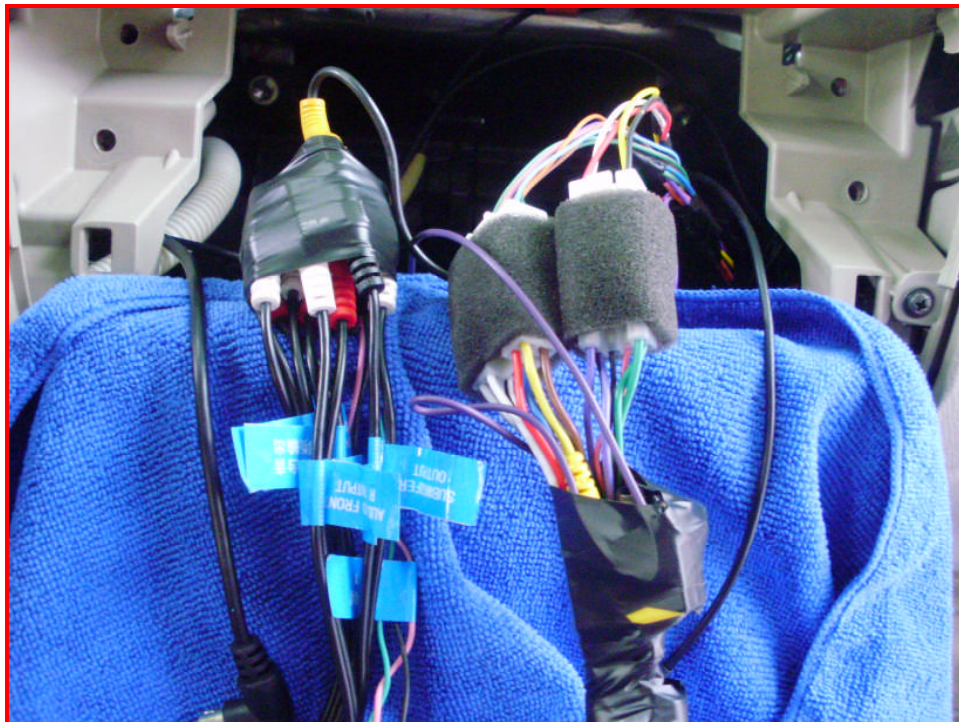


27: The cable used to connect the original camera




28: The red cable connect to rear view camera in

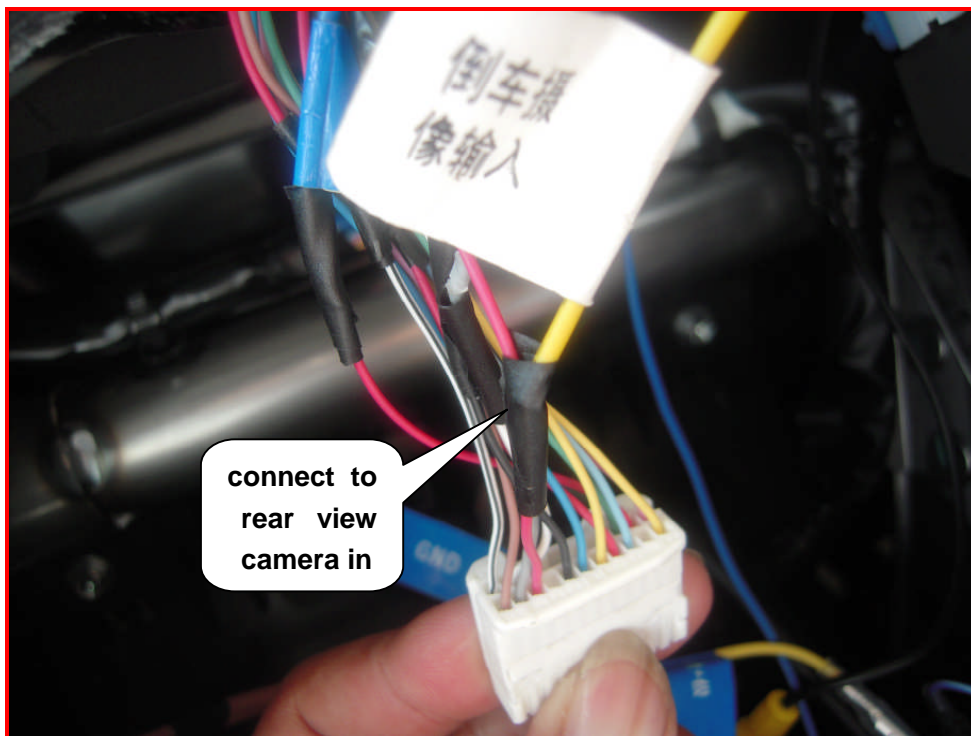


29: The white/black cable connect to GND

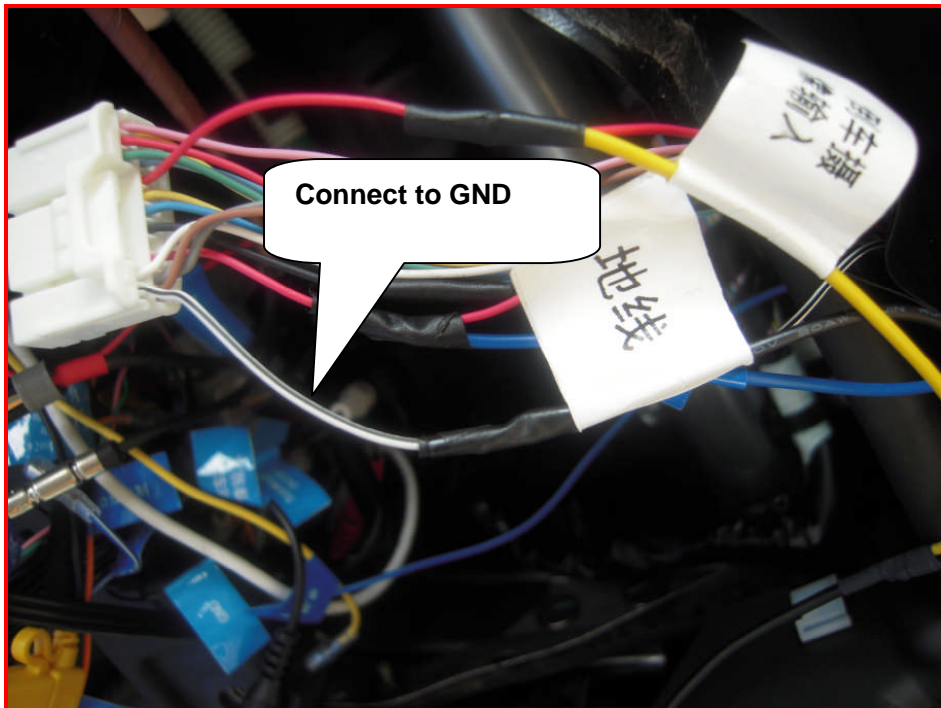

30: The red cable connect to reverse lines

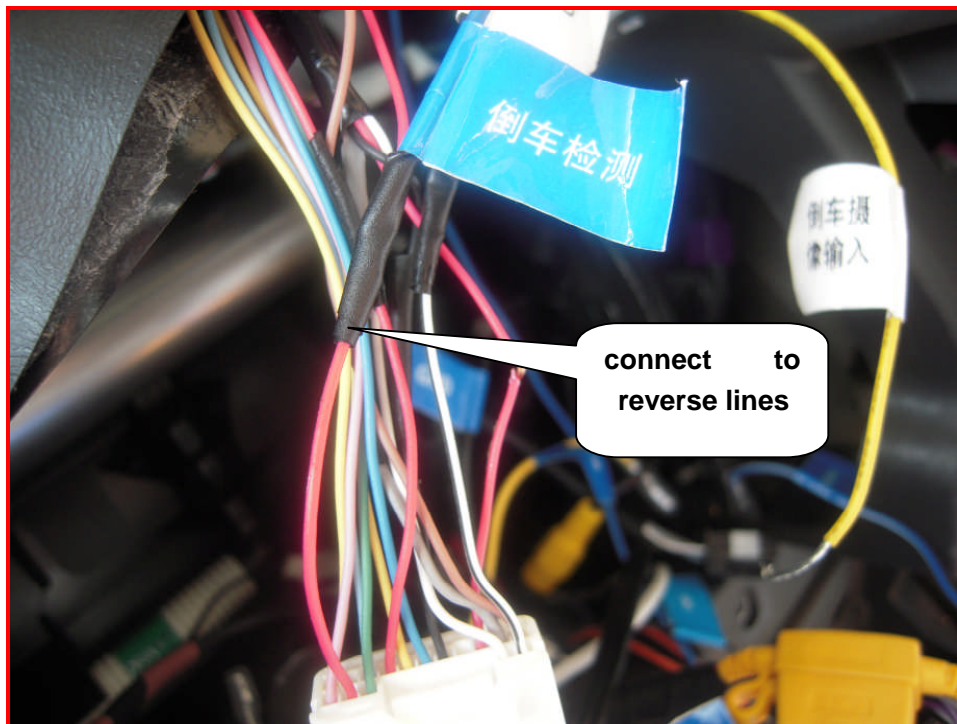

31: After FLYAUDIO cables full connection

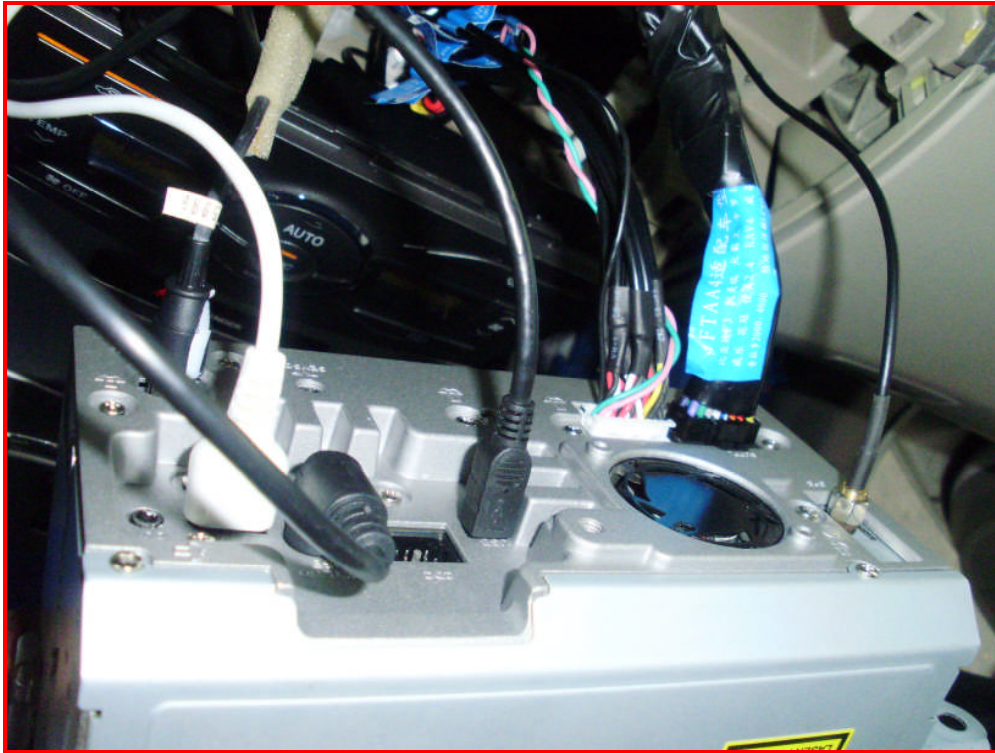

32: Connect the connectors to the factory screen



33: Install FLYAUDIO's main unit



34: Fixed FLYAUDIO's main unit



35: Same as step 34



36: Install the air conditioner wind outlet



37: Same as step 36



38: Install the button of air conditioner



39: The effect after installation

